




Attach Polycarbonate shield  
to table with 4 10-24 screws  
provided using 5/32 allen  
wrench. Tighten gently






Attach dynamic head  
fixture assembly to the  
table with 1/4 - 20  
screws provided using a  
3/16" allen wrench.  
Tighten firmly



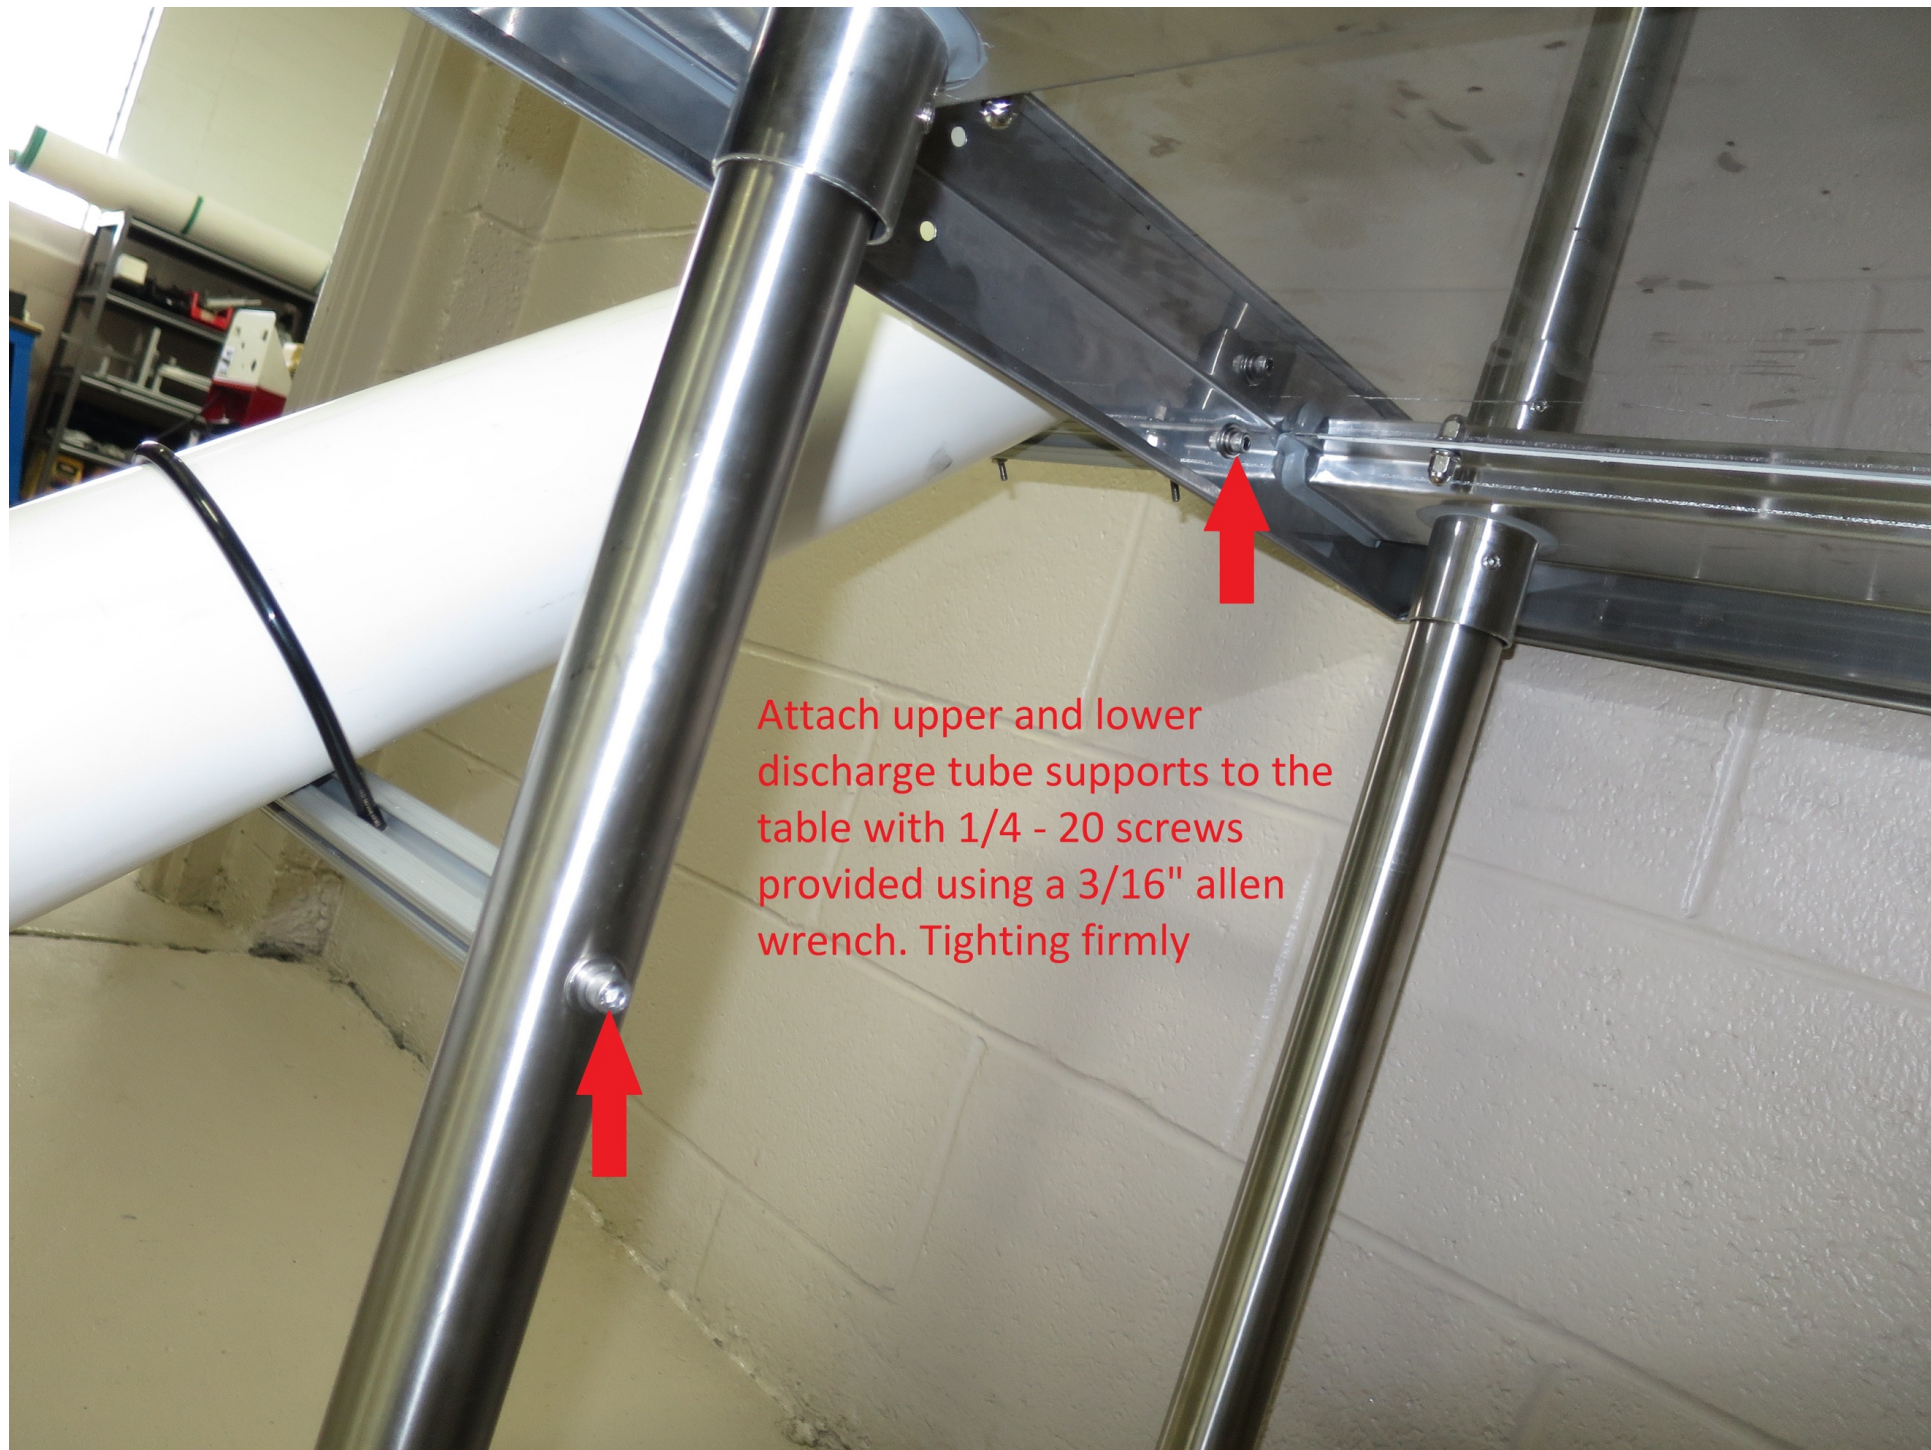

Attach upper and lower  
discharge tube supports to the  
table with 1/4 - 20 screws  
provided using a 3/16" allen  
wrench. Tighting firmly



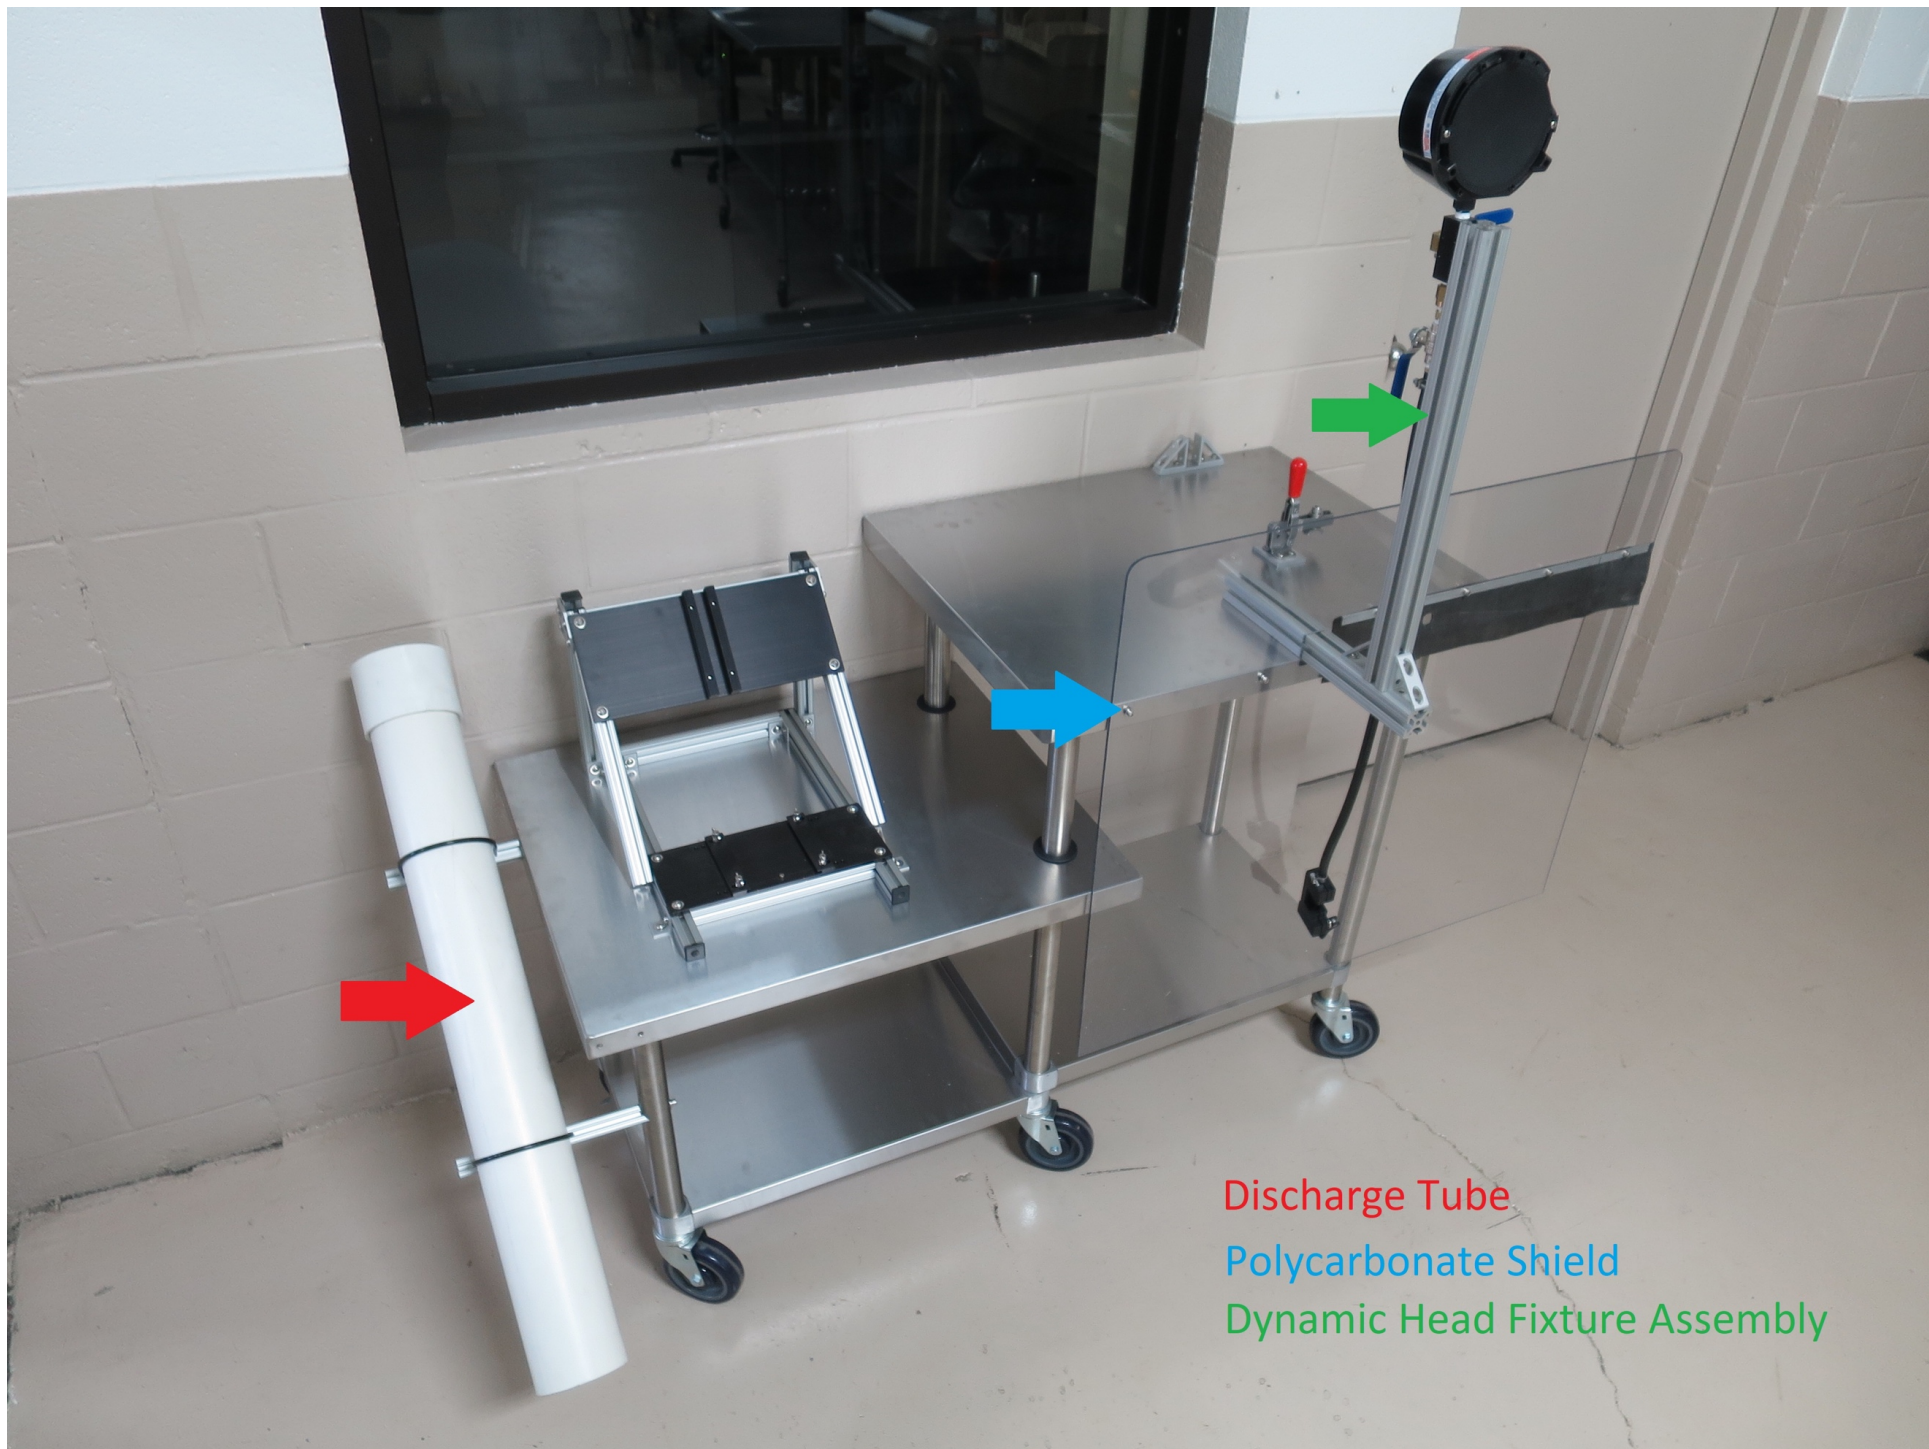

Discharge Tube  
Polycarbonate Shield  
Dynamic Head Fixture Assembly